





REF. NOT-MEETING BOX_0921




1.BASE ASSEMBLY



- Under the base, install the adjusment pads.


- Adjust the flatness of the base with a level.

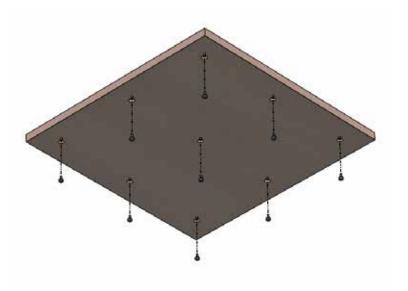



- Glue the joints under the profiles.

- Screw the profiles to the base.

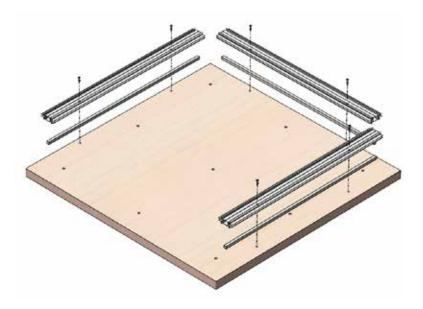






1c Position the pole on the base's 4 angles.





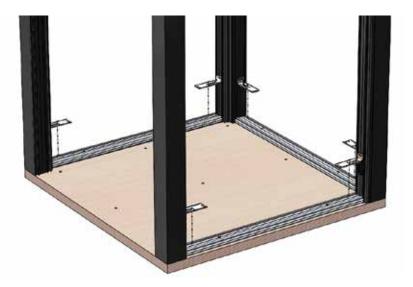



2.TRANSOMS INSTALLATION




Screw the plates onto the crosspieces.




Screw the brackets onto the crossbars.



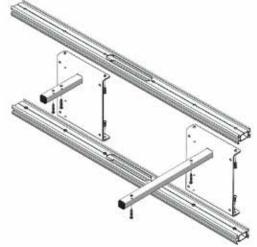




Screw the crossbars to the structure using the measuring rod for the height positioning.

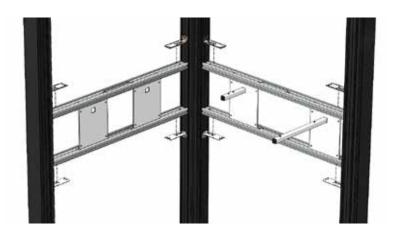





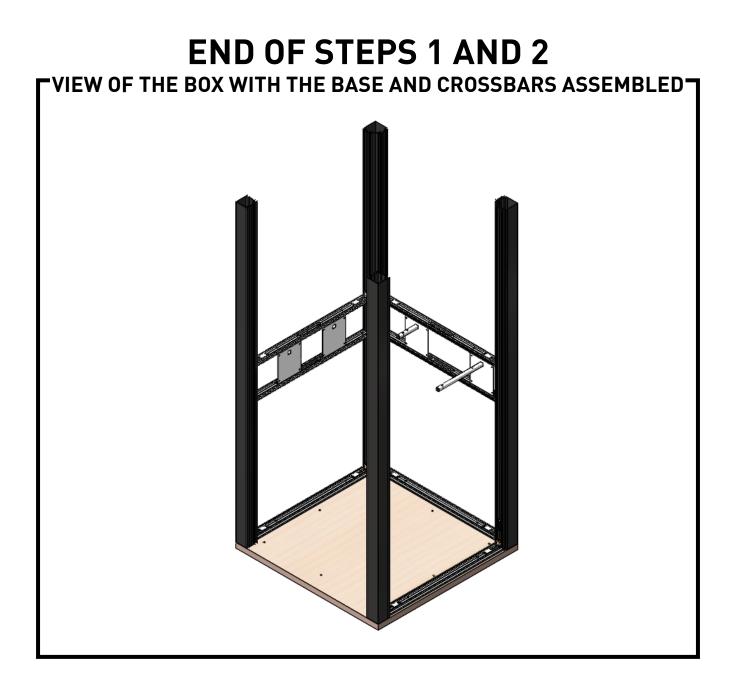




3.CEILING ASSEMBLY

- Assemble the ceiling frame using the brackets.


- Screw in the corner brackets.



3B Install the ceiling and its equipment.

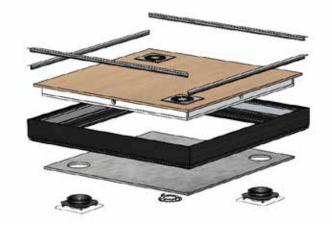

3c Screw the wedges under the ceiling.

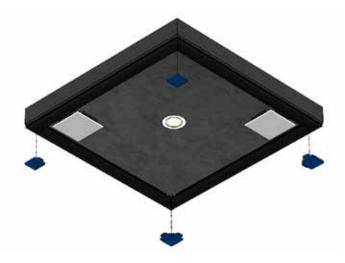





Install the ceiling on the poles.












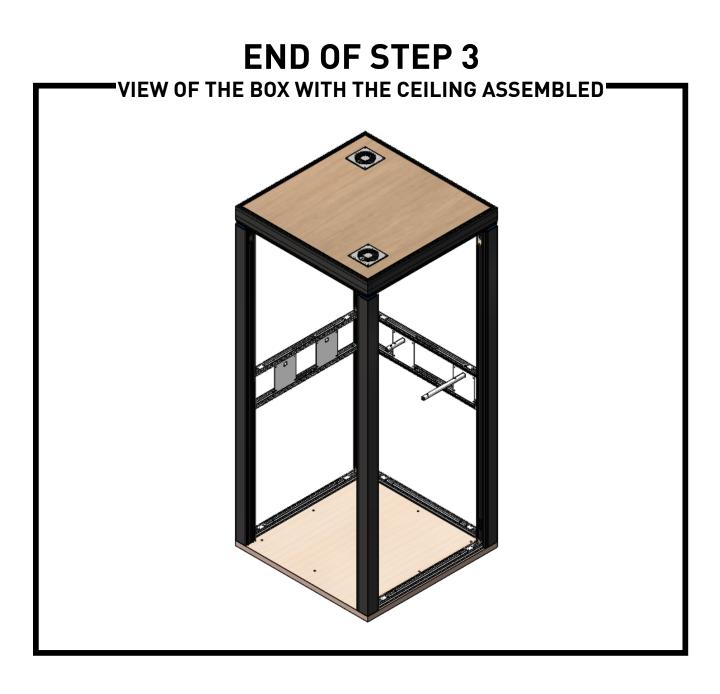




4. GLAZING ASSEMBLY



Position the glazing wedges.

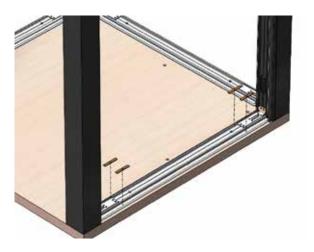

4B

(1) Install the vertical glazing covers.

(2) Install the horizontal glazing covers.












Start with the installation of the inner glazing and the joint covers.

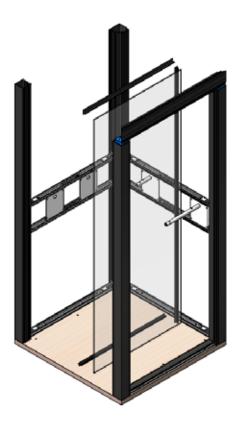




Continue with the installation of the outer glazing and the joint covers.







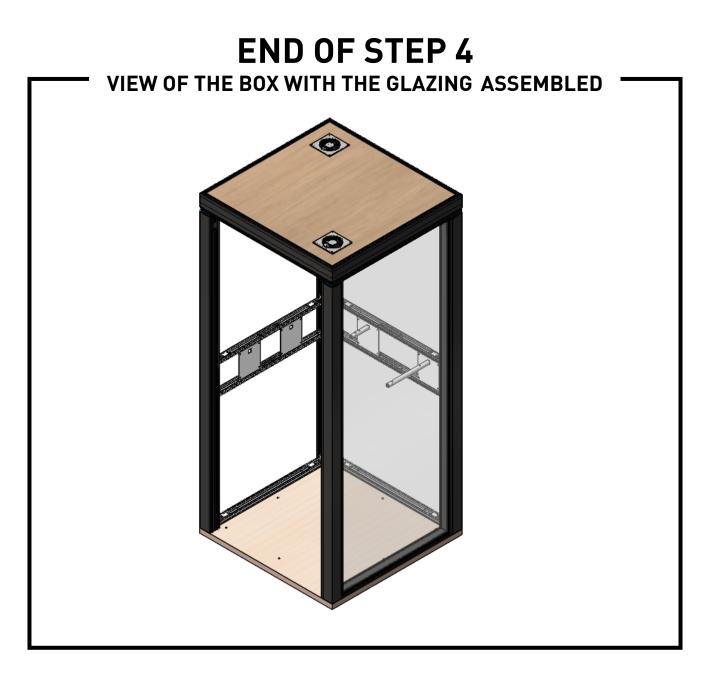



5. PANELS ASSEMBLY



Install the inner panels.








Install the horizontal inner joint covers, then the vertical inner joint covers.




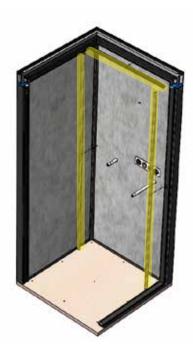






(1) Place the insulation.

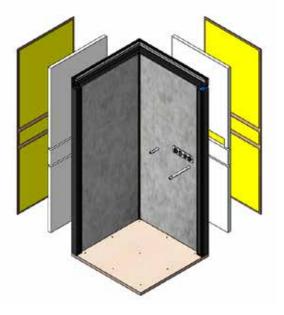

(2) Place the exterior panel.

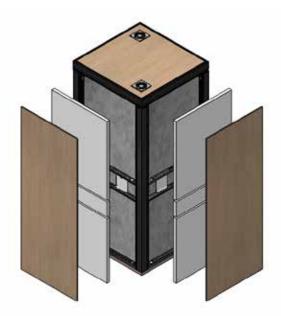



Place the joint covers on the exterior panels.













6. DOOR CASES AND ACCESSORIES ASSEMBLY







Place the joint covers.








- Install the table.

- Screw the table to the brackets.



6D Place the carpet on the floor.

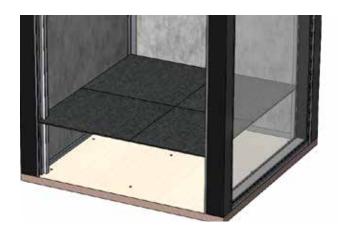



Install and screw the stair nosing onto the base.





7. DOOR ASSEMBLY

7A - Check the opening direction of door.

- Install the hinges on the rabbet.

- Screw the door case to the pole, between the hinges.



7B - Hang the door on its hinges.

- Clip the striker into the striker plate.





7c Cut and place the groove covers onto the door case horizontally and vertically.

